

TOSHIBA



For CANVIO Wireless Adapter/STOR.E Wireless Adapter/

CANVIO Cast Wireless Adapter

Manual for disconnecting from the internet.

Manual Version 1.00

Revision History

Version	Revision Date	Description
01	July 20, 2018	Initial release

Notice

The information contained in this manual, including but not limited to any product specifications, is subject to change without notice.

TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION AND ITS SUBSIDIARIES AND AFFILIATES ("TOSHIBA") PROVIDE NO WARRANTY WITH REGARD TO THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO ANY OF THE FOREGOING. TOSHIBA ASSUMES NO LIABILITY FOR ANY DAMAGES INCURRED DIRECTLY OR INDIRECTLY FROM ANY TECHNICAL OR TYPOGRAPHICAL ERRORS OR OMISSIONS CONTAINED HEREIN OR FOR DISCREPANCIES BETWEEN THE PRODUCT AND THE MANUAL. IN NO EVENT SHALL TOSHIBA BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, WHETHER BASED ON TORT, CONTRACT OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

DISCLAIMER

We assume no responsibility whatsoever for any damage or loss resulting from the use of this application.

THIS APPLICATION IS PROVIDED "AS IS" WITHOUT WARRANTIES OF ANY KIND. WITHOUT LIMITING THE FOREGOING, TOSHIBA DISCLAIMS ALL WARRANTIES AND REPRESENTATIONS OF ANY KIND RELATING TO THE APPLICATION, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, OR NONINFRINGEMENT OF THIRD PARTY RIGHTS. TOSHIBA DOES NOT WARRANT THAT THE OPERATION OF THE APPLICATION WILL BE UNINTERRUPTED, ERROR-FREE, OR SECURE. ANY INSTALLATION AND/OR USE OF THE APPLICATION SHALL BE AT YOUR OWN RISK.

About Trademarks




Android is a trademark of Google Inc.

IOS is a trademark or registered trademark of Cisco in the U.S, and other countries and is used under licenses.

All other company names, product names, and service names mentioned herein may be trademarks of their respective companies.

Safety Precautions

This section lists important precautions which users of our product(s) (and anyone else) should observe in order to avoid injury and damage to property, and to ensure safe and correct use of our products. Please be sure that you understand the meanings of the labels and graphic symbols described below before you move on to the detailed descriptions of the precautions, and comply with the precautions stated.

 DANGER	Indicate an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates practices that may cause property damage and other problems, but not personal injury.
NOTE	Provides important information.

*Serious injury including blindness, wounds, burns (low and high temperature), electric shock, fractures, and poisoning, etc. with long-lasting effects or that require hospitalization and/or long-term hospital visits for treatment.

*Minor or moderate injury includes wounds, burns, electric shock, etc. not requiring hospitalization and/or long-term hospital visits for treatment.

*Property damage means damage to device.

Table of Contents

Introduction.....	5
Procedure to disconnect the internet	6

■ Explanation of marks in this document



Information

Describes functions, restrictions, and matters for reference.



Note

Describes additional instructions and notes.

Introduction

This document explaining the procedure to disconnect Canvio (STOR.E) Wireless Adapter from the internet.

Please read this document carefully before executing.




Information

Toshiba will not be responsible for any damage caused by this.


Procedure to disconnect the internet

Internet connection is disconnected by the following instructions.


1. Plug the AC adapter to a power outlet, then plug the micro USB cable from the AC adapter to the Wireless adapter, and connect your USB storage to the Canvio Wireless Adapter with the USB cable.

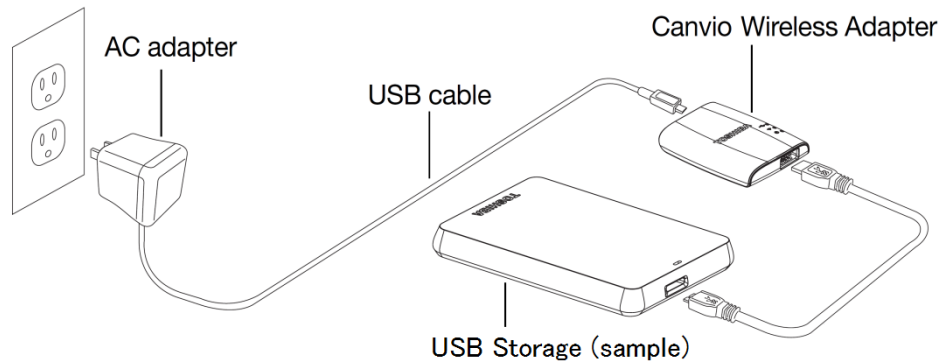


2. Press and hold Reset button for 5 seconds. The system will restore to its factory settings. The Canvio Wireless Adapter will reboot.

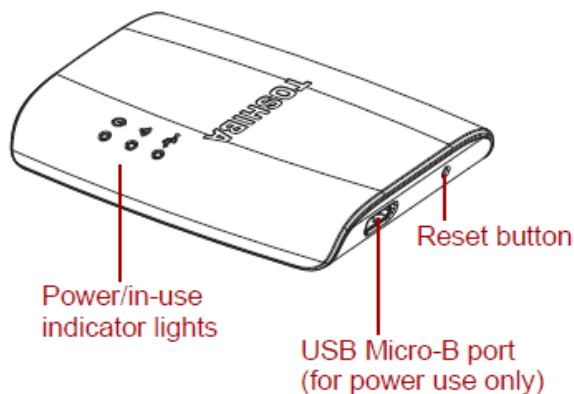

3. Power on your Android™ or iOS Device, then call the wireless settings screen on your local device and connect to the Canvio Wireless Adapter wirelessly. (Displayed SSID is “Toshiba_wadp_****”. (**** are unique digits or characters.))

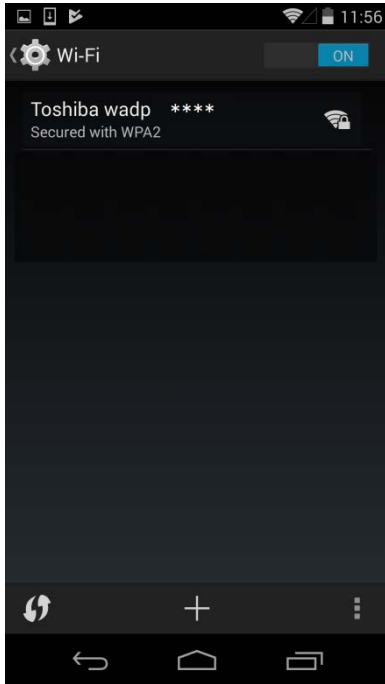


 Please be sure to change the default password immediately upon first usage of the product.

Information


4. Return to your device initial menu, and then start “Toshiba Wireless Adapter” app.

5. Touch “  ” icon.

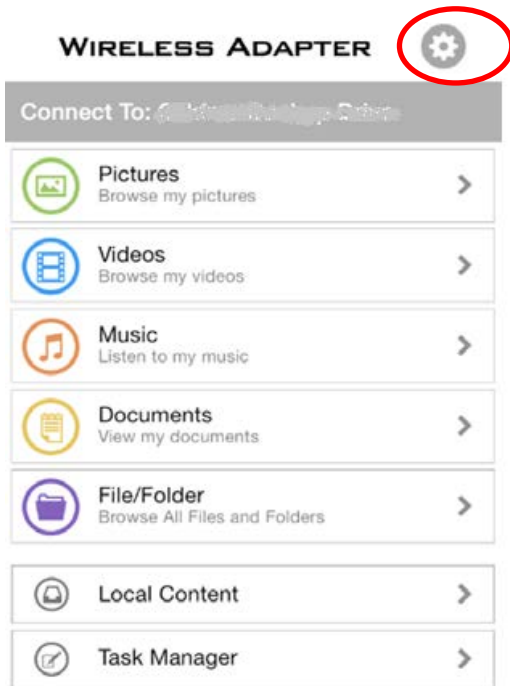


6. Scroll down the display, and please confirm Firmware Version is "2.0.7".
In case the firmware version is "2.0.5" or earlier, please be sure to update
firmware following the website, and then back to procedure No.1.


(http://www.canvio.jp/en/news/hdd/ot_notice/20171017.htm)

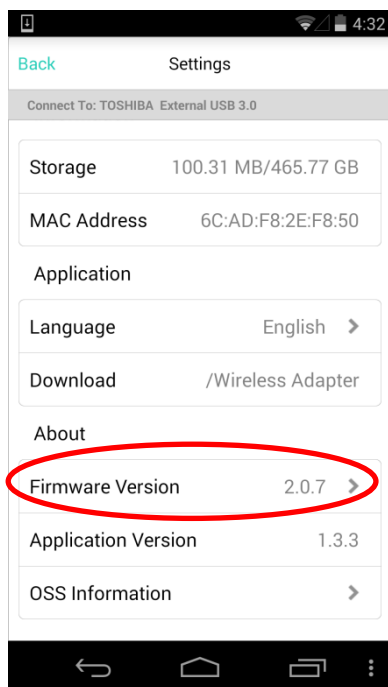


7. Move the "Enable Password" slider to the right to enable the password feature.

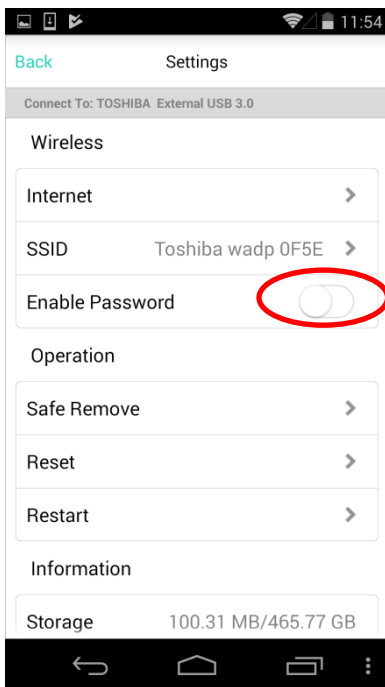


8. To change wireless network password from default settings, input your unique password character, and then touch **OK**.

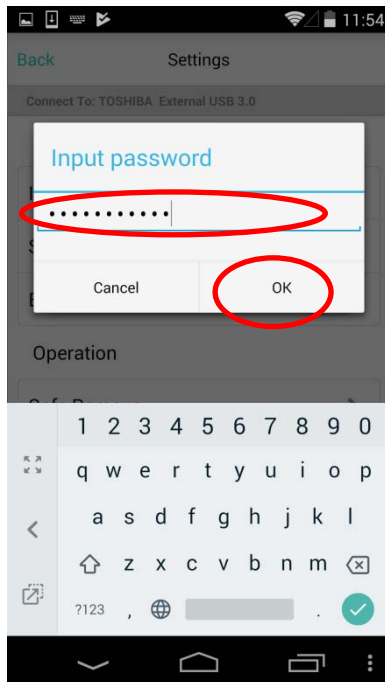


9. Touch **Apply** for applying your unique password.

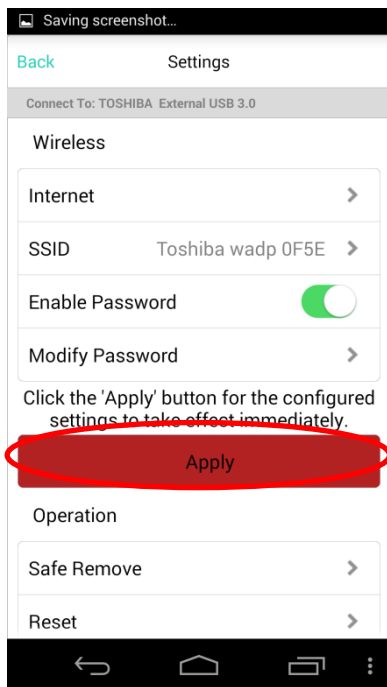

10. Touch **OK** , and then the Wireless Adapter will reboot.

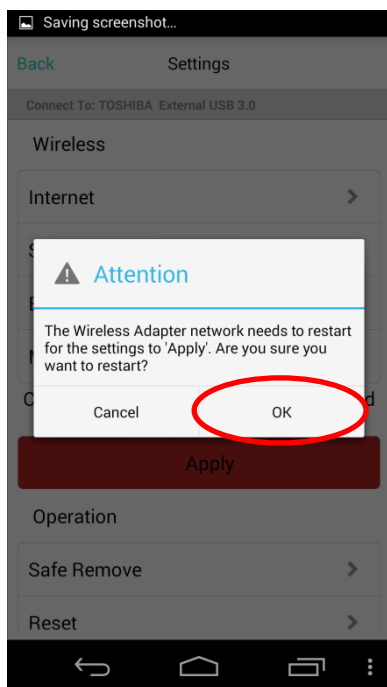


11. Call the wireless settings screen on your local device and connect to the Canvio Wireless Adapter wirelessly. (Displayed SSID is "Toshiba_wadp_****". (**** are unique digits or characters.)). Wireless network password is the character which you set previously.

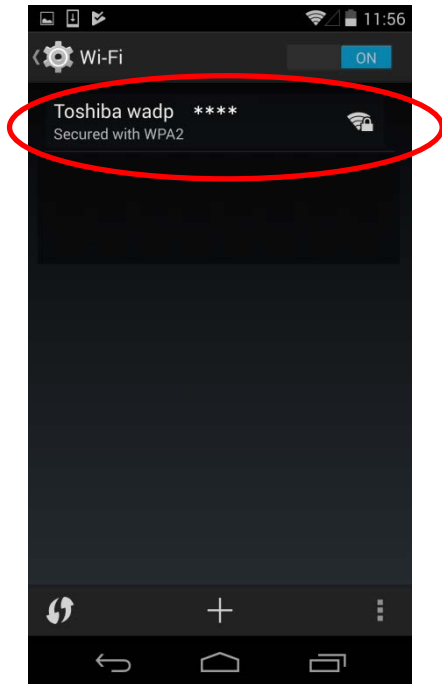


12. Return to your device initial menu, and then start "Toshiba Wireless Adapter" app.

13. Touch “  ” icon.

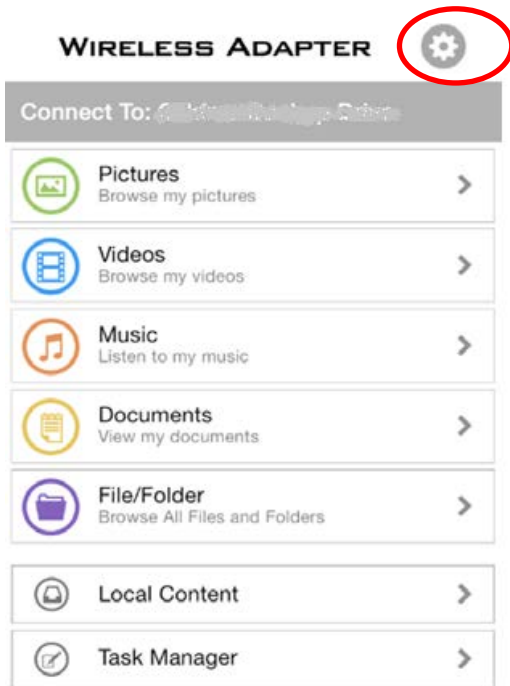

14. Touch **Internet**.

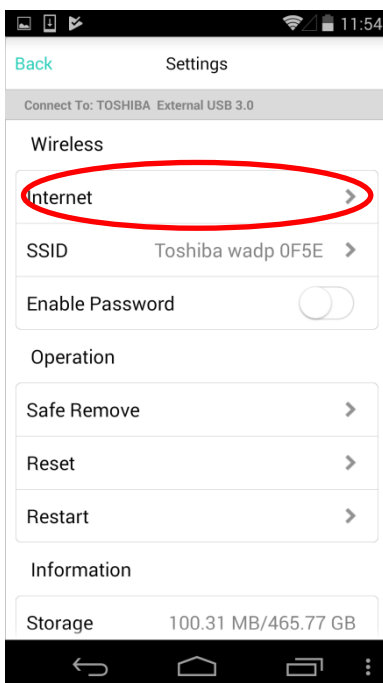


15. Please confirm wireless router icon is gray scale (not green). It means internet is not connected. (Please refer below figure.)

In case wireless router icon is green, back to procedure No.2.


OK case

(Internet is not connected)

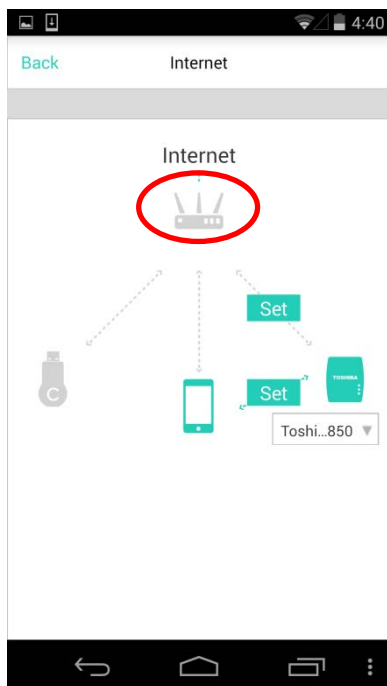

NG case

(Internet is connected)

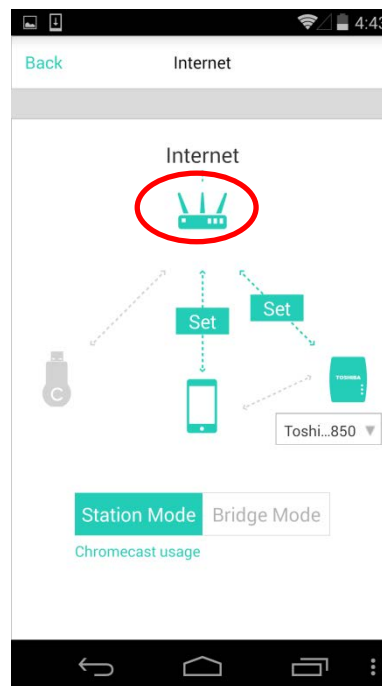

16. Return to main app menu.

TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION

1-1, Shibaura 1-Chome, Minato-ku, Tokyo 105-0023, Japan

© 2018 TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION, All Rights Reserved.